Hardware Requirements

- 2
- Check Bluetooth Locking/Unlocking
- Check Remote Locking/Unlocking

- 1 Sifely Smart Lock
- 2 Gateway (sold separately)



Connected with



Check that the Sifely app is able to lock/unlock using Bluetooth.



Check that the Sifely app is able to lock/unlock remotely with Gateway



Tap on "+" inside Google Home App

Home

Den

1 device

Routines

Connect SmartThin

(2)

Settings

Invite home member X


Den speaker

Play music

Broadcast


4

Tap on "Set up Device"

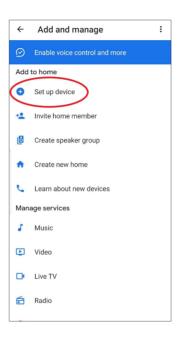

5

Tap on "Works with Google"

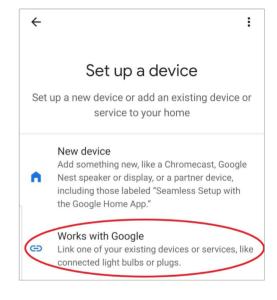

Search "ScienerSmart" in Search Bar

sciener

ScienerSmart

7 devices

Linked services

Add new


8

×

Log in Sifely Account

Link the Sifely Smart Lock account and provide permission to access your locks.


Note: If your username is your phone number, please enter as "+1XXXXXXXXXX" where "+1" are in front.

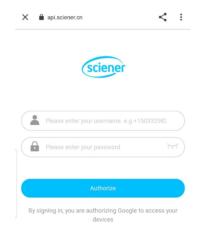

How Do I Set My Pin?


You will need a pin to unlock door lock when you perform voice control, please follow the 4 steps set up unlock pin.

Step 1: Go to the Sifely App and Tap on "Works with".

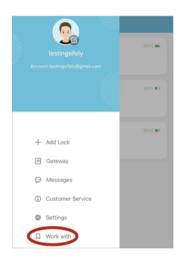

How Do I Set My Pin?

Step 2: Select "Google Home"

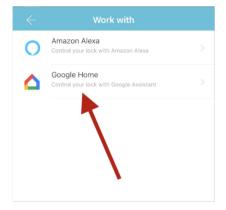

How Do I Set My Pin?

11


Step 3: Make sure that this setting is set to Turn On



2

How Do I Set My Pin?

Step 4: Set the security code which will be your PIN for the voice commands.

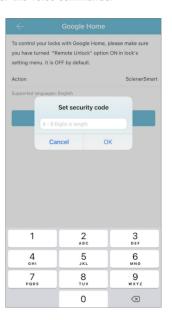

Done!

Once "Google Home App" discovers the "Sifely Smart Lock", you can issue voice commands to "Google Assistant" as outlined below:





"Hey Google, lock <your door lock name>"

"Hey Google, unlock <your door lock name>"